


# Tuscan Iron Entries

Rough opening (R.O.) guide sheet- Arched top door

The voids above the door may be filled in prior to sheetrocking.

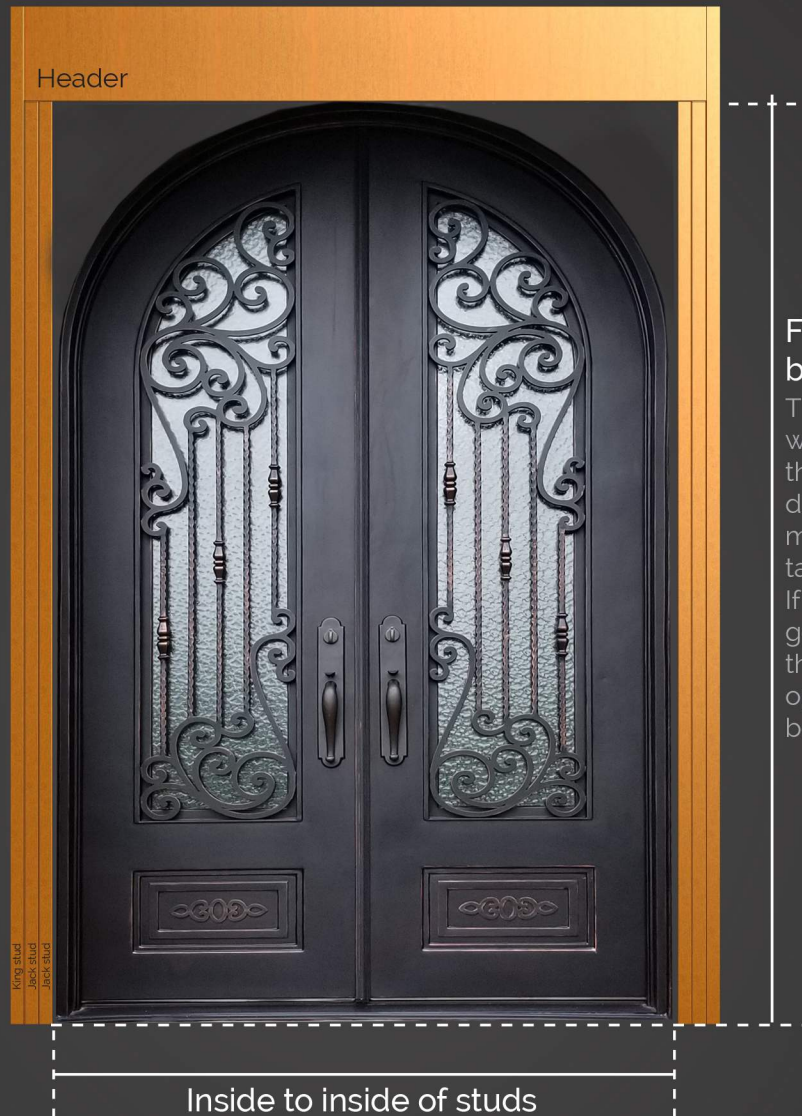

## Finished floor to bottom of header

This measurement will be 2" taller than the finished jamb dimension. This measurement will be taken from the slab. If the finished floor is going to be thicker than 2", the rough opening will need to be adjusted.

## Inside to inside of studs

This measurement will be 1" wider than the finished jamb dimension.



## Framing Tips

- Triple stud the rough opening when possible.
- Screw studs together
- Rough opening must be 1" wider and 2" taller than finished jamb.